

# PIR-TF-25-360 OCCUPANCY SENSOR

for ceiling 360° moutage



- 24V AC/DC
- OFF-delay 0,1 to 30 min
- ON-delay 0,1 to 10 min
- Alarm output: One changing contact


## FUNCTION

PIR-TF-25-360 is an occupancy sensor specially designed for the HVAC industry. It is housed in an elegant white enclosure. The lens has a detection angle of 360° in order to detect occupancy in a reliable way. The ON-and OFF-delay can be set by means of jumpers.


## TECHNICAL DATA

<b>Power supply:</b>	24V AC/DC ±2V
<b>Current consumption:</b>	5mA
<b>Alarm output:</b>	1 changing contact, 24V AC/DC, 0,2A
<b>Ambient temperature:</b>	-20°C to +60°C
<b>Weight:</b>	85g
<b>Moutage height:</b>	2,4 - 4,2 m
<b>Colour:</b>	white
<b>Detectable speed:</b>	Between 0,1~3,0 m/sek.


## DETECTION PATTERN

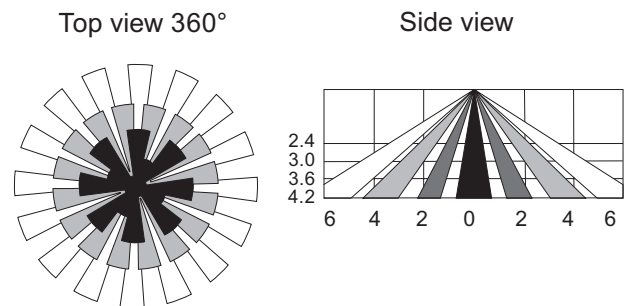



## DIMENSIONS (mm)

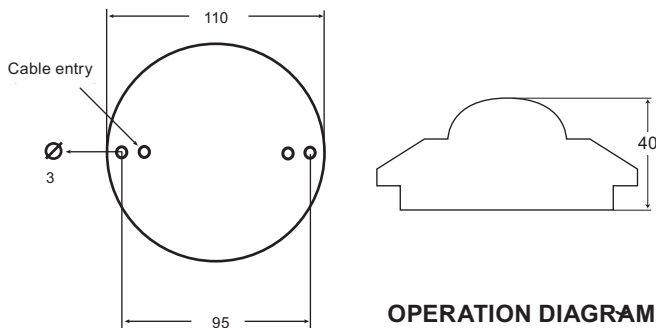

## WIRING DIAGRAM

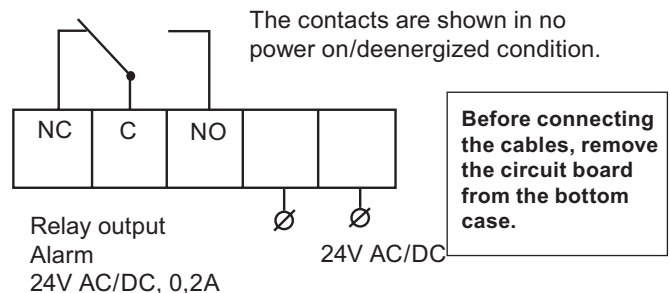

## OPERATION DIAGRAM

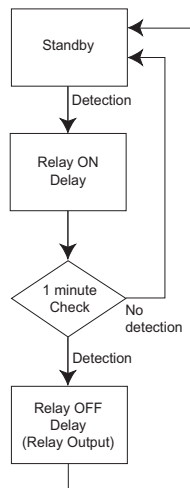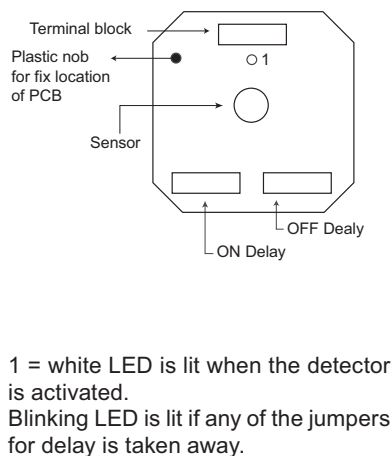

## ON AND OFF DELAYS

	ON	OFF
■ A	0 sec	10 sec
■ B	10 sec	1 min
■ C	30 sec	5 min
■ D	1 min	10 min
■ E	5 min	20 min
■ F	10 min	30 min

**Note!** Before changing the delay settings, switch always off the supply voltage.

### INSTALLATION HINTS

Do not install where the detector is exposed to direct sunlight or directly above strong sources of heat.

Make sure the detection area does not have obstruction (plants, large pieces of furniture, curtains etc.) which may block the pattern of coverage.

### INSTALLATION & WALK TEST

#### Installation

1. Open the front cover by loosening the locking screw. Remove the circuit board from the bottom case.
2. Punch out the adequate knockouts and mount the bottom case firmly with the screw provided at the selected position in the ceiling.
3. Replace the circuit board and connect the wires to the corresponding terminals.
4. Remember to seal all unused cable entries and screw holes in order to stop false alarms which can be caused by insects, etc.
5. Replace front cover, then walk test can be proceeded.
6. Note! Before changing the delay settings, **switch off** the supply voltage.

#### Walk Test

Apply the power supply and wait 30 seconds for the unit to warm up.

The LED will blink (long and short) during warm up period. Ensure the jumper head connectors of ON & OFF delays are placed at "A" position (shortest time). After the warm up expires, walk across the detection zones (invisible) at normal speed. The LED will lit whenever the sensor detects the motion.

#### Location of the sensor

Mounting heights	2.4m	3.0m	3.6m	4.2m
Coverage (dia)	6.0m	7.5m	9.0m	10.5m